

## VCOM DEMO GUIDE



### TO DEMO VCOM:

1. Download the Control Panel (either PC or Mobile version) Setup.exe from <http://intracomsystem.com/VCOMsystemdownloads> and save to your C: Drive. Note Mobile client runs on Windows Mobile 5 and 6 Smartphone's and PDA's with minimum 400 MHz processor.
2. Run the installer and follow the prompts. When you get to the "VCOM Control Panel Configuration" screen you will need to select your headset and secondary audio device to monitor the system, if desired. For Mobile units set the following: 'Select Microphone' to 'Audio Capture'; 'Select Microphone Connector' to 'WaveInputPin'; 'Select Earphone / Speaker' to 'Audio Renderer'; and 'Monitor / Secondary Audio Device' to '(None)'. Enter 'Virtual Matrix IP Address' 208.109.209.117 and port 1000 after the colon.
3. Login for a live demonstration by selecting a user name of your choice (first name recommended) and "vcom" as the password for Control Panels on PCs and "mobile" for Control Panels on Mobile devices.

*It is recommended that you schedule a demo with your sales representative as the demo system is not regularly monitored.*

### FIREWALL INFO FOR NETWORK ADMINS:

To connect to the VCOM server set up for demos over the public internet allow a TCP connection for data on port 1000 (outbound) and UDP connection for audio on port 1000 (outbound).

### HOW TO LEARN MORE:

- Download VCOM User Guides from the link above for detailed installation, configuration, and use information;
- Contact us at [info@intracomsystem.com](mailto:info@intracomsystem.com) or (818) 357-2347;
- Visit us online at [www.intracomsystem.com](http://www.intracomsystem.com).